veito **CARBON INFRARED HEATER** CH1800 RE

User's Manual veito

DESCRIPTION OF USE

- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions Thank you for purchasing verto carbon innared heater. Flease read the instructions thoroughly before using your heater.
 After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz
 The product he product the product were product to the product of the p


- This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accordance with our commitment to product quality, design and control.

2

CONTENTS

Safety Precautions

These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly. • There are 3 classifications of safety precautions and they are listed in the box below.

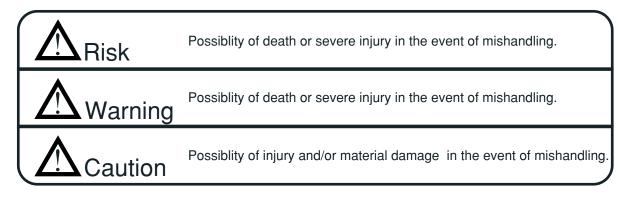

*Meaning of picture signs

Indicate prohibition



Indicate contents that people must carry out


ARisk

*After reading this, be sure to keep it at a place where other users can refer to it at any time.




PRECAUTIONS

M WARNING *After reading this, be sure to keep it at a place where other users can refer to it at any time.

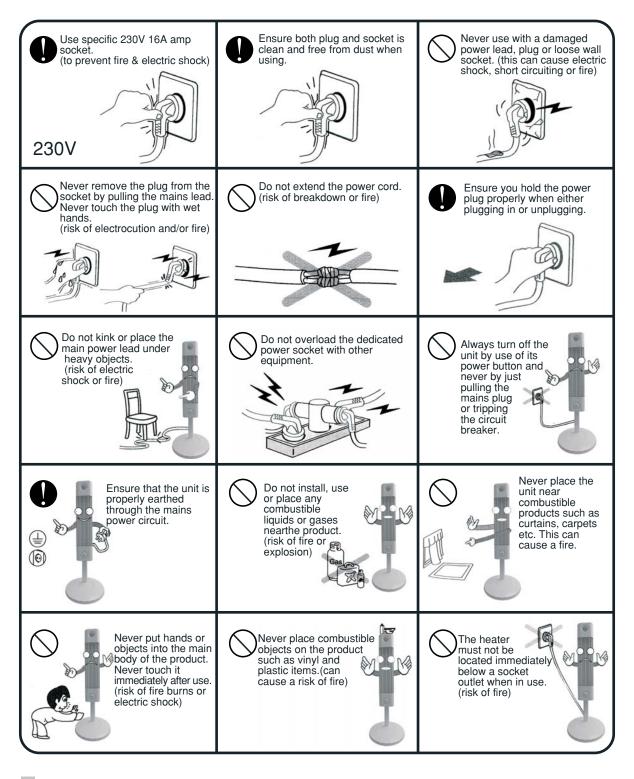


\Lambda WARNING

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

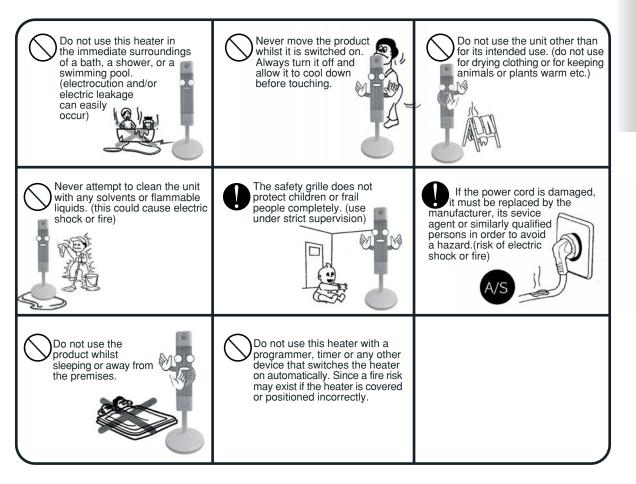

▲ CAUTION

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

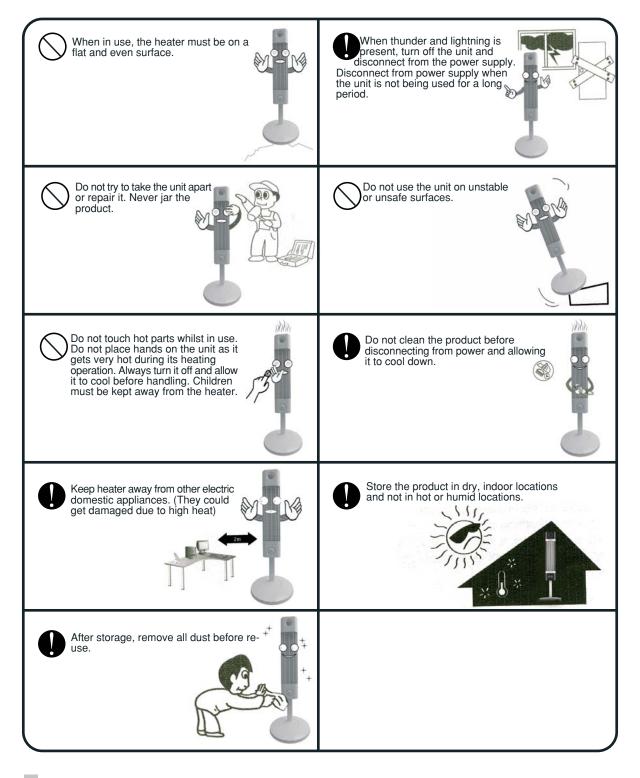


Precautions for installation and before use

PRECAUTIONS FOR INSTALL


*After reading this, be sure to keep it at a place where other users can refer to it at any time.

PRECAUTIONS

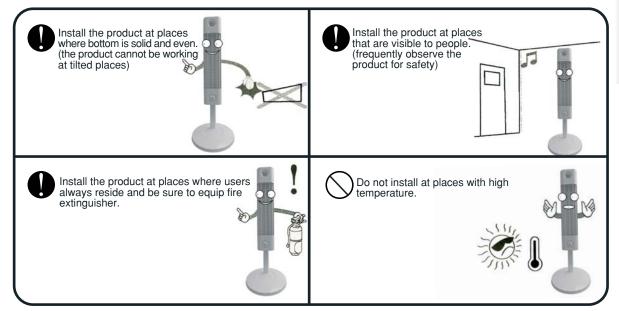

HOW TO INSTALL

*Keep packaking parts because they are necessary in maintaining the heater for a long time.

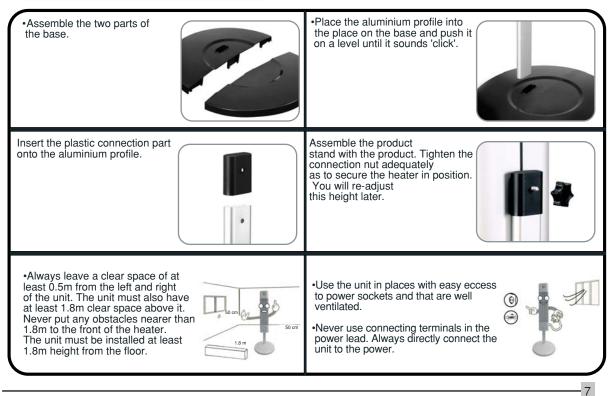


HOW TO USE POWEF

• When using 230V •Put plug into specific outlet for 230V with earth terminal.




Configuration and Name


MAIN BODY

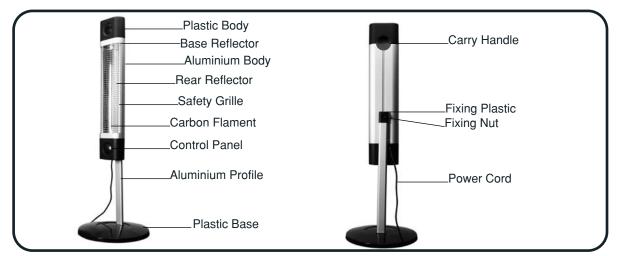

•External appearence can be changed without prior notice for improving quality.

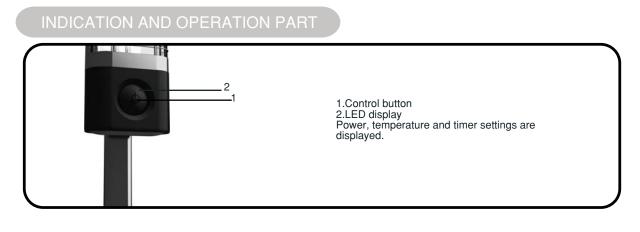

REMOTE CONTROL

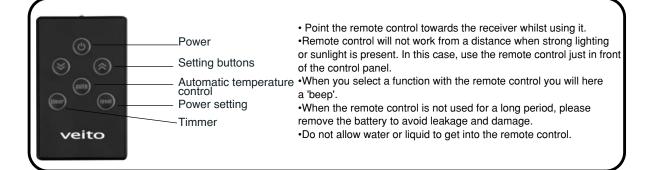

HOW TO REPLACE THE REMOTE CONTROL BATTERY



The remote control uses a CR2025 lithium 3.0 V coin battery that is commonly used in small electronic devices.
Push the battery compartment release button and then slide out the battery tray on the bottom of the remote control.
Remove the old battery and put the new battery in, making sure that the battery's positive side is facing up.

•Slide the battery tray back into the remote control until it clicks.

How to use

OPERATION AND STOP

It is recommended that persons who may have difficult understanding or operating the appliance controls should not be left unattended while using the appliance. Special considerations should be given to young children and the less able bodied!

- 1. Start operation by pressing the setting or the auto button.
- 2. Heater is turned on and operation is started with the sound of beep.
- 3. Press power button to stop.

HEAT AMOUNT CONTROL

- 1- Start the operation by pressing the setting or the auto button.
- 2- When you press the auto button, you can set the temperature by using the setting buttons;
- Electronic temperature control automatically regulates power consumption based on your set temperature and eliminates annoying hot and cold cycles. 3- When you press the level button, you can set the heat steps by using the setting buttons;
 - Heating capacity can be set to 4 different levels 900W-1200W-1500W-1800W.





- When you press the timer button, you can set the off timer between 1-9 hours by using the setting buttons;
 When the timer is set, off timer lamp will light up and the heater will automatically shut down at the end of the determined time.
- To stop the off timer, set the timer as "0" or restart the heater.

How to Diagnose Safety Device

Veito heater is equippped with diverse safety device, preventing a risk of fire. In the event that heater is not working properly, safety device is operated and heater is automatically stopped.

When the heater is knocked over, it After checking that there is no damage, switch on again and operate normally.

· If the heater exceeds temperature requirements, it will automatically switch itself off.



The unit will automatically stop if there is a power failure. You must press the power setting button to continuou use.




DESCRIPTION OF USE

Cleaning and Maintenance

Precautions for examination and handling;

- Handle heater when it is completely cooled down and power is cut off.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by
- a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside. Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.

Storage and Instructions

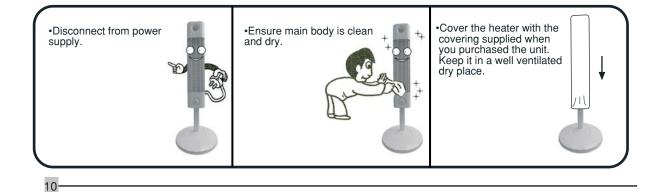


Troubleshooting

This heater was manufactured conscientiously and checked several times before delivery. If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance. If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service Department.

Repairs must only be carried out by authorized professionals.

\bigcap	Syptoms	How to deal with		
Unit is not working	 Is electric supply working? Check that the power plug is plugged in. Is the circuit breaker off? 	 Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker. 		

Wiring Diagram

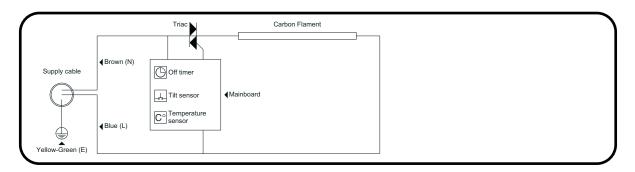

Specification

classification model	CH1800 RE	\frown
Heating Capacity BTU/h	8000	
Maximum Power (W)	1800	
Space for use (m ²)	20	
Power supply	230V 50/60Hz	
Size(mm) (WxLxH)	400x400x1350	
Product weight (kg)	2.8	
Safety device	Tilt sensor, overheat protection	
Controlling method	Push button and remote control	
Controlling function	Automatic temperature control, 4 power settings, off timer	

WARRANTY

(Applicable to first retail purchaser only)

Veito Carbon Infrared Heater give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

1. The warranty period is 12 months from the date of first purchase.

2. If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.

3. This warranty card is valid within your country.

4. Proof and date of purchase must be supplied.

5. Please complete the details below and keep this warranty in a safe place.

6.All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost

DESCRIPTION		CARBON INFRARED HEATER			
MODEL			CH1800 RE		
DATE OF PURCHASE			PRODUCT SERIAL NO:		
Warranty Period		() Months			
DISTRIBUTOR	Nam	e of Company			
	Tele	Telephone No.			
		Name:			
CUSTOMER DETAILS		Address:			
		Telephone:			



Notes				



Distribuidor oficial para España:

The Barbecue Store Avda. Carmen Saenz de Tejada, 1 29650 Mijas Costa (Málaga) Teléfono: 952477152 - 952477161 Fax.: 952580781 Email: dmbrico2@telefonica.net http://www.thebarbecuestore.es

www.veito.com

