

USER INSTRUCTIONS



SKOTTEL BRAAI (740)



ADVENTURE TO GO

USER INSTRUCTIONS

IMPORTANT

Read these instructions carefully so as to familiarise yourself with the appliance before use.

CAUTION

Provide ample ventilation. Gas appliances consume air (oxygen).
Do not use an appliance in an unventilated space to avoid endangering your life.
Retain these instructions for future reference

I. INTRODUCTION

- This Appliance complies with SABS 1539:2003.
- Appliance category: vapour pressure – LPG.
- For use exclusively with CADAC No7, No 10, No 13 or No 15 LPG Cylinders. It may be hazardous to attempt to fit other types of gas cylinders.
- Nominal usage 136 grams per hour.
- This product uses a No. 24 CADAC Jet.
- Gross nominal heat input: 1.8 kW
- Gas appliances require ventilation for efficient performance and to ensure the safety of users and other persons in close proximity.
- Use Outdoors Only


2. SAFETY INFORMATION

- Check that the seal (F) between the Stem (E) and the gas cylinder is in place and in good condition before connecting to the gas cylinder (See Fig. 1.)
- Do not use the appliance if it has a damaged or worn seal.
- Do not use an appliance that is leaking, damaged or which does not operate properly.
- Use this appliance only on a firm level surface.
- Ensure the appliance is used away from flammable materials. Minimum safe distances are: Above the appliance 1.2m. At the rear and sides 0,6m (See Fig. 2)
- Ensure that the appliance is fitted to the gas cylinder in a well-ventilated location, preferably outdoors, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- If there is a leak on your appliance (smell of gas), take it outside immediately into a well-ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.
- In the event of light back (where the flame burns back and ignites at the jet (G) immediately turn off the gas supply by closing the cylinder valve using the control knob (See fig. 1). After the flame is extinguished, re-light the appliance as described in Section 4 below. Should the flame light back again, return the appliance to your authorised CADAC repair agent.

3. ASSEMBLY INSTRUCTIONS

- The CADAC Skottel Braai is easy to assemble and prepare for use.
- To fit the stem (E) to the gas cylinder, first check that the cylinder valve is in the "off" position by turning the control knob clockwise to its "stop" (See Fig. 1). Screw the stem into the cylinder in a clockwise direction until it is fully engaged.
- Tighten by hand only.
- Place the burner pan (B) on the stem, making sure that the burner tube (C) fully engages on the stem (E).
- Place the skottel (A) on the burner pan, making sure that the skottel locators (H) sit properly on the outside lip of the Burner Pan (B).

Figure 1

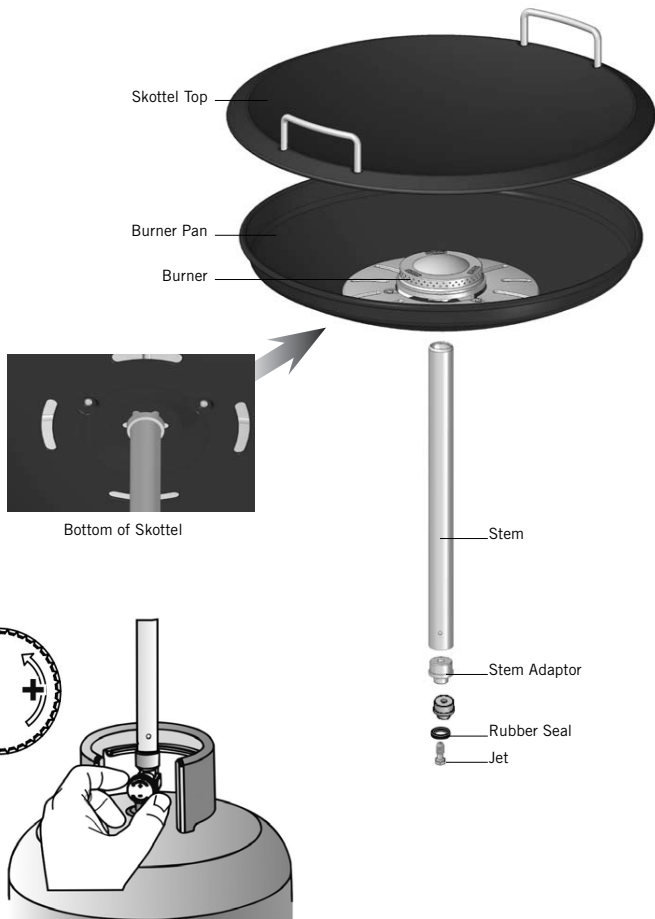


4. USING THE APPLIANCE

- CAUTION: Accessible parts may become very hot. Keep young children away from the appliance.
- Do not move the unit whilst in use. The use of protective gloves is recommended.
- To light the appliance, light a match or barbecue lighter, turn on the cylinder valve by turning the control knob in an anticlockwise direction to the open position and light the appliance burner (C) (See Fig. 3).
- Use the control knob to adjust the flame intensity to the desired level by turning the knob clockwise to decrease the flame and anti-clockwise to increase the flame (See Fig.1).
- Cooking temperatures are easily adjusted to suit your own requirements by turning the Cylinder valve control key or knob to regulate the degree of heat. A feature of the Skottel BBQ is that it offers various heat zones. This is very useful as some foods cook quicker than others and the food that is ready first, can be moved to the cooler areas of the dish to keep warm whilst the balance of the food is still cooking.
- Useful optional accessories are the Skottel Food Warmers that attach onto the Skottel BBQ to keep food on the edge where it remains warm without drying food out or over cooking. See Spares and Accessories table.
- To pack away, let the unit cool off. After cleaning, place the appliance in clean and dry place.

5. CHANGING THE GAS CYLINDER

- Check that the burner is extinguished before disconnecting the appliance from the gas cylinder by turning the control knob fully closed as shown in Fig. 1.
- To disconnect the appliance from the gas cylinder, unscrew the stem from the cylinder in an anti-clockwise direction after removing the grill plate and burner pan from the stem.
- Check the seal before replacing the gas cylinder.
- Change the gas cylinder outdoors and away from other people.


Figure 2

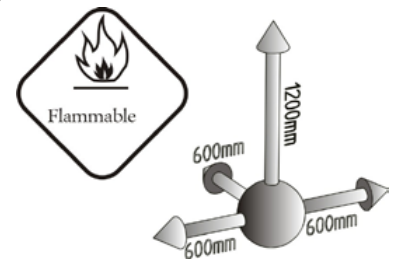

6. CLEANING

- Skottel BBQ: After cooking, leave the burner on low with soapy water in the cooking dish to soften cooking residue. When satisfied that excess fat has been removed, wash the Skottel BBQ in warm water using a suitable non-abrasive detergent. Do not use sharp metal objects or abrasive detergents on the vitreous enamel coated surface.

Figure 3

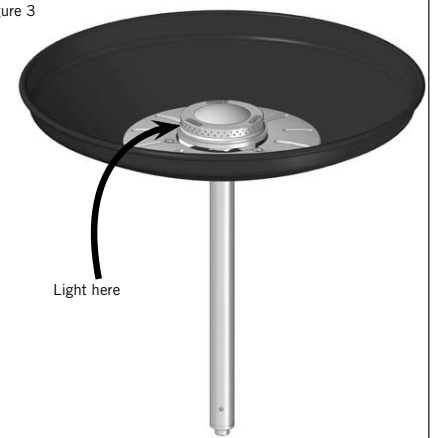

7. SPARES AND ACCESSORIES

- Spare jets and seals are available from your CADAC distributor.
- Use only genuine CADAC branded spares and accessories.

Description	Part No.
Rubber Seal	105R
Jet	720-1R

8. RETURNING THE APPLIANCE FOR REPAIR OR SERVICE

- Do not modify the appliance.
- If you cannot rectify a fault by following these instructions, contact your local CADAC distributor for details on how to return the product for repair.

CADAC (Pty) Ltd
www.cadac.co.za



Distribuidor oficial para España:

The Barbecue Store
Avda. Carmen Saenz de Tejada, 1
29650 Mijas Costa (Málaga)
Teléfono: 952477152 - 952477161
Fax.: 952580781
Email: dmblico2@telefonica.net
<http://www.thebarbecuestore.es>

